

ASPHALT SHINGLE ROOFING

GUIDELINES FOR ASPHALT SHINGLE RE-ROOFING

CITY OF INDEPENDENCE - BUILDING INSPECTIONS DEPARTMENT

GENERAL DETAILS and BUILDING PERMITS

Before undertaking any re-roofing project there are several questions that should be considered to ensure a successful project. You should familiarize yourself with all aspects of the re-roofing process before you begin. There are various conditions about your roof that may limit your product choices or affect the cost of your roofing job.

The City of Independence has adopted the 201* International Residential Code (201* IRC). Roofing materials must be installed in accordance with Chapter 9 of the 201* International Residential Code and the manufacturer's installation instructions.

Building permits are required for re-roofing existing dwellings. Building permit fees are established by the municipality. Building inspections are performed at two stages to verify code compliance. Permit costs and required inspections can be obtained by contacting the building inspections department at 816-325-7401.

FREQUENTLY ASKED QUESTIONS

Do I need a new roof? How old is it? A roof that has been properly installed, ventilated, and has not been damaged can last 20 years or more. An inspection of the roof should be done periodically. Look for cracks, curled or cupped shingles, worn mineral coatings, exposed nails, previous patches, holes and exposed underlayment or sheathing.

Does the roof leak? If the answer is yes, it is necessary to determine why. If you have inspected the roof and it looks sound, the problem could be roof flashing. Many roof leaks are result of bad or misapplied flashing. You should spend time in the attic looking for water stains, particularly around vents, chimneys and vertical wall elements above the roof. Flashing can sometimes be replaced or repaired without installing a whole new roof.

Do it myself or hire a professional? This is a question only you can answer based on your skill level and time. An asphalt roofing project can be successfully accomplished by the homeowner if you take the time to become familiar with the roofing procedures. Our ordinances require you to be the homeowner and the occupant of a home to obtain a permit. Steep-sloped asphalt roofs and those with multiple or intricate valleys can present special problems. Always be sure you have the right equipment and skills before undertaking this type of roofing project. Other types of roofs such as wood shingles, shakes and clay tile normally require special skills for installation. If you decide to hire a professional, be sure the company is a city licensed contractor or roofer.

Should I overlay the existing roof or tear off the existing shingles? There are two options available for re-roofing installations. One would be to tear off the old roof before



applying the new one. The second would be to lay new shingles over the existing roof. Roofing materials are heavy, so the code only allows one layer of roofing material to be re-roofed over.

An overlay can be the less expensive option. However, it is not necessarily always the best choice. There are advantages to tearing off the old roof before installing a new one. For example:

- If there are any defects in the roof deck, they will be revealed when the roof is torn off. These defects should be repaired before applying the new roof. If condensation problems exist in the attic, they too will be revealed when the roof is torn off. Properly designed attic ventilation can then be installed in order to help eliminate such problems.
- When the old roof is torn off, an ice-protection underlayment must be installed before applying the new roof. This will help prevent ice damage.
- Tearing off the old roof and starting with a clean deck before re-roofing may result in a smoother finished-roof system.

- Tearing off the old roof will typically result in a longer roof life than when the roof has been laid over. This is because they are installed smooth over sound material and have new underlayment installed.


Recovering versus replacement? New roof coverings shall not be installed without first removing all existing layers of roof coverings where any of the following conditions exist:

- Where the existing roof or roof covering is water-soaked or has deteriorated to the point that the existing roof or roof covering is not adequate as a base for additional roofing.
- Where the existing roof covering is wood shake, slate, clay, cement or asbestos-cement tile.
- Where the existing roof has two or more applications of any type of roof covering.

Exceptions:

1. Complete and separate roofing systems, such as standing-seam metal roof systems, that are designed to transmit the roof loads directly to the building's structural system and that do not rely on existing roofs and roof coverings for support, shall not require the removal of existing roof coverings.
2. Installation of metal panel, metal shingle and concrete and clay tile roof coverings over existing wood shake roofs shall be permitted when the application is in accordance with Section R905.2.2.
3. The application of new protective coating over existing spray polyurethane foam roofing systems shall be permitted without tear-off of existing roof coverings.
4. Where the existing roof assembly includes an ice barrier membrane that is adhered to the roof deck, the existing ice barrier membrane shall be permitted to remain in place and covered with an additional layer of ice barrier membrane in accordance with Section R905 and the manufacturers installation instructions.

What is roof slope and does it limit the choice of shingles? Asphalt shingles shall only be used on roof slopes of two units vertical in 12 units horizontal (2:12) or greater.

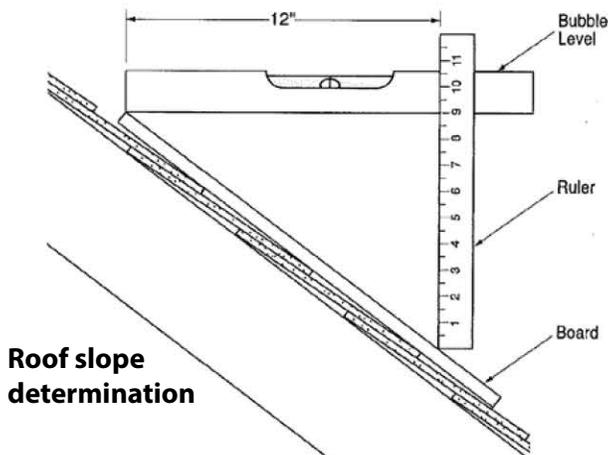

The slope of the roof is measured by the vertical rise of the roof to the horizontal run and is expressed as a fraction. A "4:12 roof slope" means the roof rises 4 feet for every 12 feet of horizontal roof span.

Roof slopes between 2:12 and 4:12 can use shingles, but require roof application techniques to take into account a greater potential for ice dam water backup. Roof slopes between 2:12 and 4:12 require a double underlayment application in accordance with EWF[a]` R905.2.2.

Slopes of 4:12 and above can use standard asphalt roofing applications bVWV[a]` R905.2.2.

What are the ventilation requirements? Roof ventilation is required and must be installed in accordance with the 201* International Residential Code and the manufacturer's instructionsž

Enclosed attics and enclosed rafter spaces formed where ceilings are applied directly to the underside of the roof rafters must have cross ventilation for each separate space by ventilating openings protected against the entrance of rain or snow. Ventilating openings must be provided with corrosion-resistant wire cloth screening, hardware cloth mesh, or similar material with 1/16 inch minimum to 1/4 inch maximum openings.

Minimum vent area: The minimum net free ventilating area is 1/150 of the area of the vented space. Exception: The minimum net free ventilation area is 1/300 of the vented space provided one or more of the following conditions are met:

1. A Class I or II vapor retarder is installed on the warm-in-winter side of the ceiling.
2. At least 40 percent and not more than 50 percent of the required ventilating area is provided by ventilators located in the upper portion of the attic or rafter space. Upper ventilators shall be located no more than 3 feet (914 mm) below the ridge or highest point of the space, measured vertically, with the balance of the required ventilation provided by eave or cornice vents. Where the location of wall or roof framing members conflict with the installation of upper ventilators, installation more than 3 feet below the ridge or highest point of the space are not permitted.

It might be necessary to add ventilation with your new roof to meet these standards. ;D5 EWF[a]` ** (žž

What function does shingle underlayment serve? An underlayment, commonly known as roofing felt, will:


- Protect the roof deck from moisture prior to shingle application.
- Provide a degree of back-up protection in the event water

gets under roofing shingles.

Protection against ice dams can be obtained by using a special waterproof shingle underlayment at the eaves or lower edges of the roof, in addition to installing adequate ventilation and proper insulation in the attic. The code in this city requires this special waterproof shingle underlayment at the eaves or lower edges of the roof.

How can you determine if the roof is properly ventilated? An attic needs to breathe. An effective ventilation system will help prevent attic heat build-up, attic moisture and condensation, and ice dam build-up.

Research has shown that proper ventilation is necessary if the shingles are to last their design life.

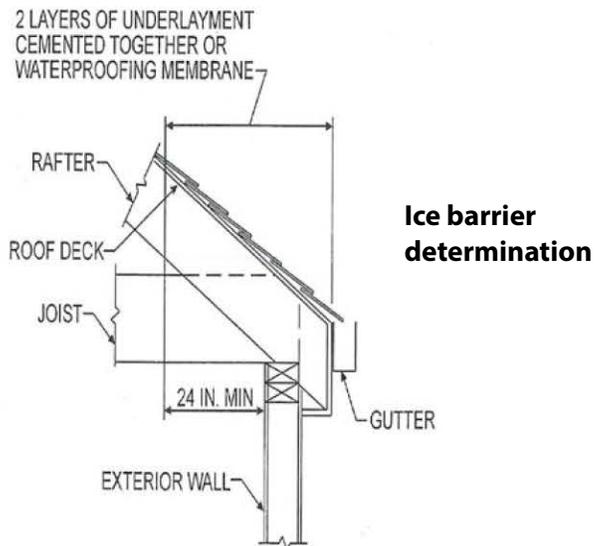

CODE REQUIREMENTS FOR ASPHALT SHINGLES

A typical installation of asphalt shingles is illustrated on page 4 for use on roofs 4:12 and greater. However, the code also permits application on a roof that has a slope of less than 4:12 if the low-slope-roofing procedures are used.

Fasteners

Fasteners for asphalt shingles must be galvanized steel, stainless steel, aluminum or copper roofing nails, minimum 12 gage shank with a minimum 3/8 inch head, ASTM F 1667, of a length to penetrate through the roofing materials and a minimum of 3/4 inch into the roof sheathing. Where the roof sheathing is less than 3/4 inch thick, the fasteners must penetrate through the sheathing. Fasteners must comply with ASTM F 1667. Staples are not permitted for shingle application unless specifically noted in the manufacturer's installation instructions on the shingle package.

Underlayment

The code requires that underlayment of one layer of non-perforated Type 15 felt lapped two inches horizontally and four inches vertically to shed water. In addition, an ice barrier that consists of at least two layers of underlayment cemented together or of a self-adhering polymer modified bitumen sheet, be used in lieu of normal underlayment and extend from the eave's edge to a point at least 24 inches inside the exterior wall line of the building. (see example)

Valley linings

Install valley linings in accordance with manufacturer's installation instructions before applying shingles. Permitted valley linings include:

1. For open valley (valley lining exposed) lined with metal: 24 inches wide and of any of the corrosion-resistant metals in Table R905.2.8.2.
2. For open valleys: Two plies of mineral surface roll roofing, complying with ASTM D 3909 or ASTM D 6380 Class

M. The bottom must be 18 inches and the top layer a minimum of 36 inches wide.

3. For closed valleys (valley covered with shingles): one ply of smooth roll roofing complying with ASTM D 6380 and at least 36 inches wide or valley lining as described in items 1 and 2. Self-adhering polymer modified bitumen underlayment complying with ASTM D 1970 can be used in lieu of the lining material.

Cricket and saddle

Install a cricket or saddle (see illustration, page 4) on the ridge side of any chimney greater than 30 inches wide. Cricket or saddle coverings must be sheet metal or the same material as the roof covering.

Sidewall flashing

Sidewall flashing against a vertical sidewall (see illustration, page 4) must be continuous or step flashing and a minimum of 4 inches and 4 inches in width and direct water away from the vertical sidewall onto the roof or gutter.

Kickout flashing


Install kickout flashing where the lower portion of a sloped roof stops within the plane of an intersecting wall cladding to divert or kick out water away from the assembly (see illustration, page 4).

Other flashing


Apply other flashing, such as flashing against a vertical-front wall and the soil stack, vent pipe and chimney flashing, according to the asphalt shingle manufacturer's printed instructions.

Drip edge


Drip edge is not required unless specifically required by the manufacturer's installation instructions.

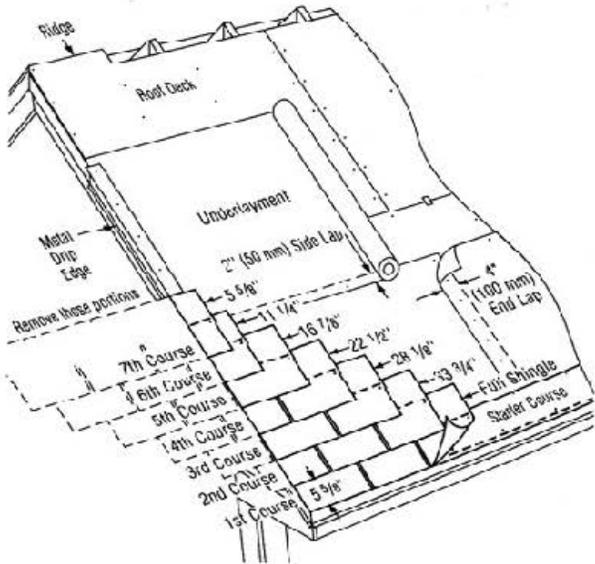


Typical roof-covering material example.

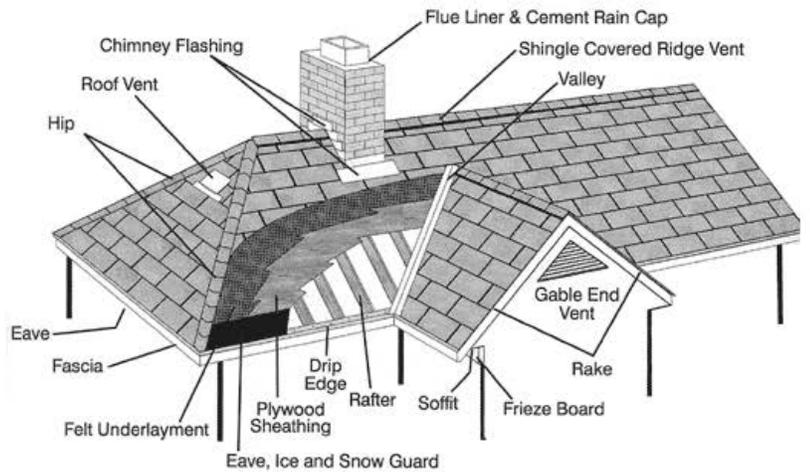


Cricket or saddle at chimney.

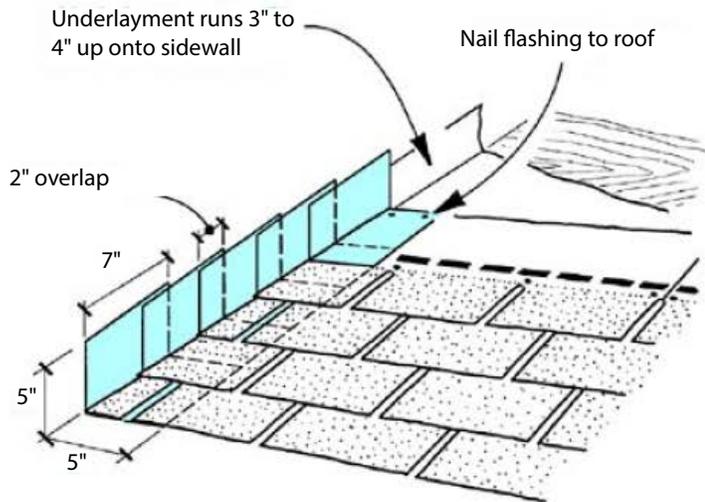

Step flashing at sloped roof and vertical wall.

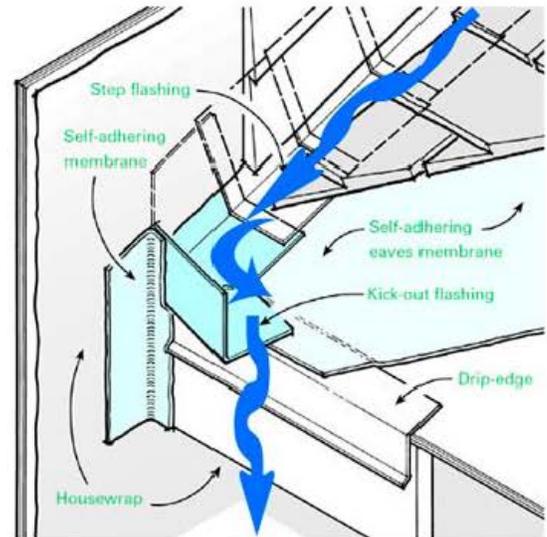

Kickout flashing directs water away from the wall.

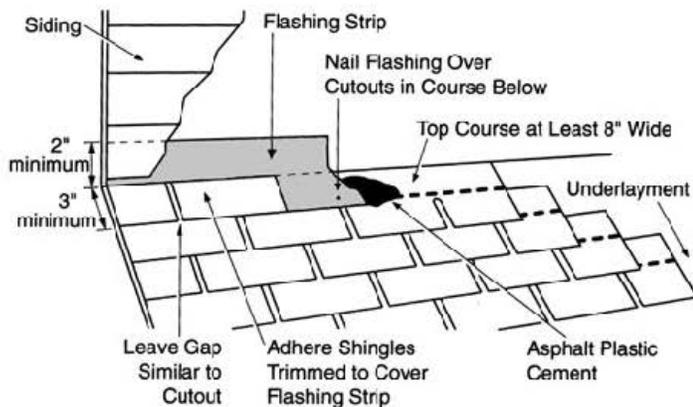

Continuous sidewall flashing at vertical wall and sloped roof.

City of Independence, Missouri

**Community Development Department
Building Inspections Division**

Web: www.ci.independence.mo.us/ComDev
Phone: (816) 325-7401

This flier is an overview of guidelines for asphalt shingle roofing. If you have specific questions, feel free to contact us.

Decking Requirements

The code for asphalt shingles, and specifically their sheathing requirements, are found in section 905.2.1 of the 2012 IRC. It states “Asphalt shingles shall be fastened to solidly sheathed decks.”

Deck sheathing is then discussed in section 803, specifically 803.2 under “wood structural panel sheathing”.

Lumber sheathing (commonly referred to as plank decking), is found in a lot of older homes. It usually consists of a “1x” type material, such as a 1x4, 1x6, or even 1x12 material has been observed.

The code asking for solidly sheathed decking then brings the question- “What is solidly sheathed?”

The definition lies in how the decking is applied. Plywood, OSB, etc. (any APWA roof approved sheathing) is an obvious choice, but where do we go when we encounter the solid lumber sheathing, or planked decking?

The code refers to the installation of this material, where most contractors reference the size of the gap between the lumber as the criteria for installation. The reason for the contractor asking is usually because the manufacturer of the asphalt shingles lists a “maximum gap” allowed in decking spacing, and anything larger then voids their warranty. The code does not consider the gap when asphalt shingles are applied, only wood shake, cement tile, and clay tile use the gap allowed parameter. The code leans towards the installation of the lumber decking as the method for rejection or acceptance.

Basically, it requires a “ship-lap” or “tongue and groove” installation, otherwise, the decking needs to either be sheathed over, or the lumber decking removed and solid structural panel sheathing be applied. Illustrations of these two types of acceptable lumber decking are shown below:



ship-lap installation



tongue and groove installation

If the decking is lumber planks and installed with either ship lap or tongue and groove methods, it can be acceptable as solid sheathing, provided it isn't compromised in any way.

Solid sheathing can also be determined to be deficient and unacceptable. If there is noticeable water damage, holes, significant unfillable gaps, or delamination of plywood or OSB board, the material can be deemed unacceptable.

Once you receive your permit, you will have a number to call for your inspections. Before felting the sheathing, if you feel the sheathing has issues, call the inspection line to have an inspector visit the site to determine whether the sheathing is acceptable. In most instances, this step is not necessary, but can aid in your decision if you are unsure.



delaminated plywood



water damaged plywood